



Enter/Exit Configuration Mode

1

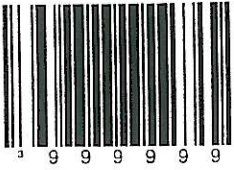


* Disable Codabar

6

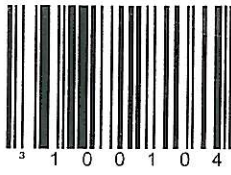


* Transmit UPC-A Check Digit

11

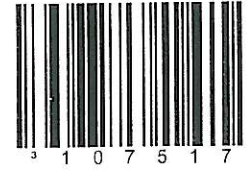


Recall Defaults

2

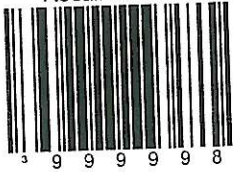


Disable Code 93

7

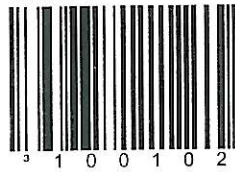


Even Parity

12

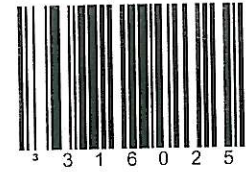


Disable Code 128

3

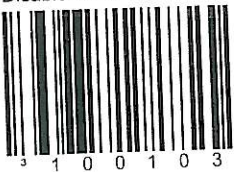

Enable UPC Prefix ID

8

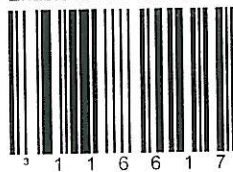

2400 BAUD Rate

13




Disable Code 39

4




Disable LF Suffix

9

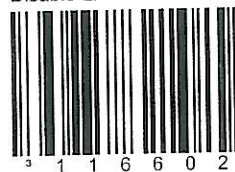


Enter/Exit Configuration Mode

14

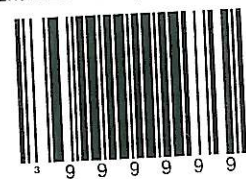

Expand UPC-E to 12 Digits

5

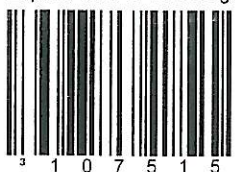

Transmit UPC-E Check Digit

10

