


Transmit UPC-E Check Digit

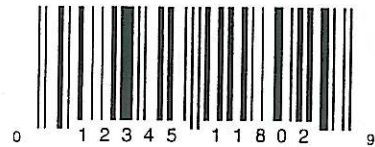


When this option is chosen, the scanner will transmit the UPC-E check digit.

Disable Line Feed



Even Parity

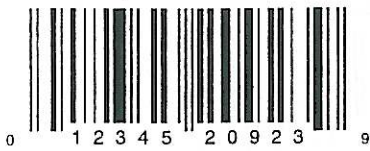


Expand UPC-E




When this option is chosen, the scanner will expand UPC-E to the 12 digit equivalent UPC-A.

2400 Baud Rate

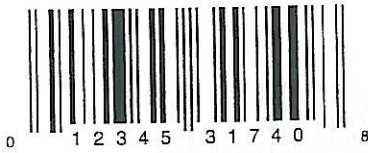


A baud rate is a unit that measures the speed at which information is transferred. The baud rate


Enter/Exit Program Mode

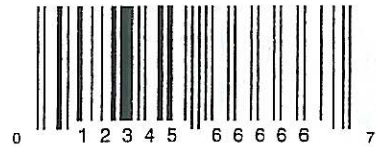


Enable UPC Prefix

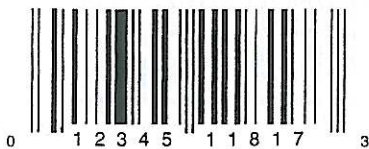

Enter/Exit Program Mode

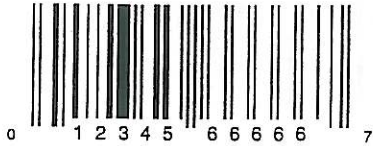


Disable Codabar

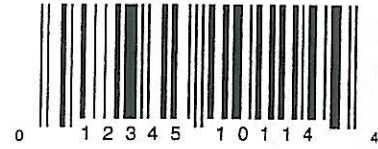

When this option is disabled, the scanner will not scan Codabar bar codes.

Load Defaults

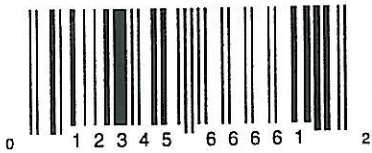


Disable Code 39




When this option is disabled, the scanner will not scan Code 39 bar codes.


Disable Code 128

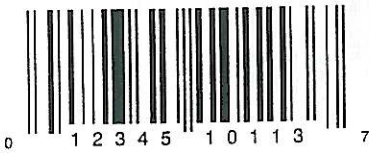

Enable MECCA

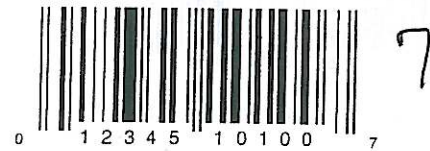


Disable Code 93

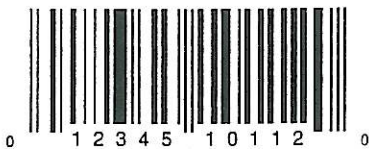

When this option is disabled, the scanner will not scan Code 93 bar codes.

*Transmit UPC-A Check Digit

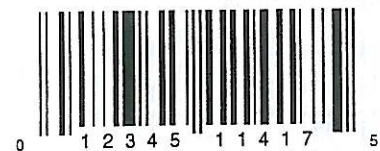

When this option is chosen, the scanner will transmit the UPC-A check digit.